



# FRICION HINGE FITTING GUIDE

HERE IS SOME GUIDANCE ON HOW TO FIT NICO FRICTION HINGES

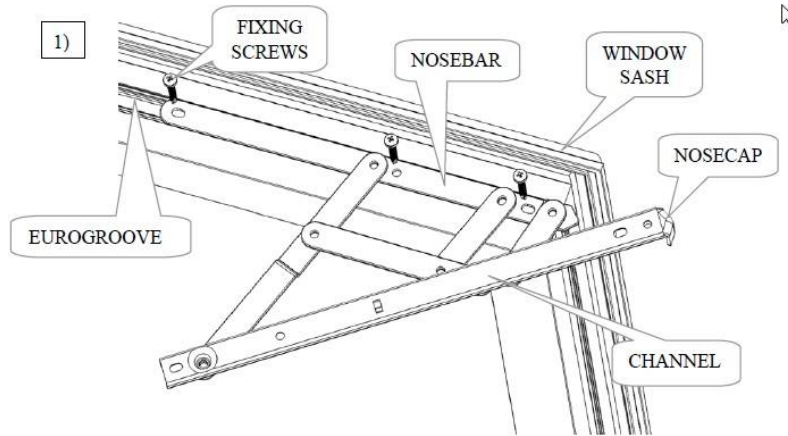

1. PLACE THE FRICTION HINGE NOSE BAR ONTO THE SASH EUROGROOVE AND FIX IN POSITION. THE POSITION WILL DEPEND UPON THE WINDOW PROFILE USED.

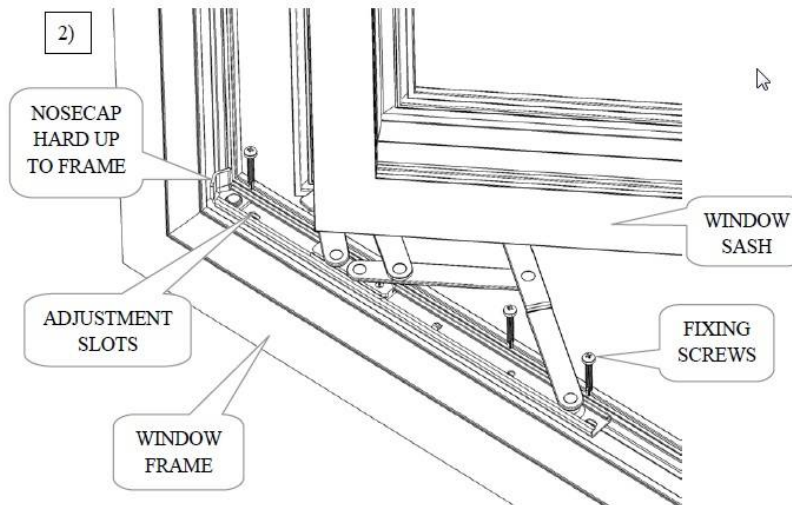

2. FIT THE SASH TO THE FRAME. ENSURE THAT THE NOSE CAPS ARE PUSHED UP TO THE FRAME CORNER AND FIX IN POSITION. ADJUSTMENT IS PROVIDED BY THE ADJUSTMENT SLOTS IF REQUIRED.