


Cupboard Pull out Basket:

Component parts

Spirit Level Bradawl For installing a single basket. ____ Tape measure Basket (A) x 1 Cross Head Screwdriver Pencil Did you know Häfele also supply tools to the trade and industry? See www.hafele.co.uk for more information. Make sure all the components are included before • you start. 4.5 x 30 mm The number for technical support is at the bottom • Panhead Screw of the page. (C) x 16 pieces Dont rush! • Read the instructions first. • Assemble in the stages shown. • Keep the fittings together to avoid loss. • • Have fun. 2 mm Spacer (D) x 32 pieces 1500 0 Runner (B) x 1 pair Cabinet width **Minimum Dimensions**

Using the runner drilling pattern shown in diagram 1, fix the runner (B) and required additional 2 mm spacers (D) using 16 x 4.5 x 30.0 mm panhead screws (C) to the internal side of the carcase with the bottom runner fixing point a minimum of 55 mm up from the floor level of the cabinet.

Board thickness	Total no. of spacers to be used on on each side of the cabinet
15 mm	8
16 mm	7/8
18 mm	6/7
19 mm	6

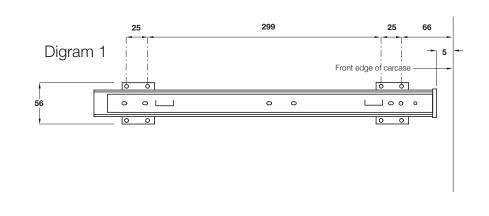

Tools required (Not Supplied)



